


**INFINITI® / NISSAN® 1990 - 2013**
**VERSION: 2015.02 DATE: MARCH, 2015**
**MODELS EQUIPPED WITH 14-PIN CONNECTOR AND OBD-II CONNECTOR (NON-CAN VEHICLES) (NOTE 1)**

SYSTEM	YEAR	DATA STREAM	CAN COMMUNICTION CHECK	READ CODE	CLEAR CODE	ACTIVATION AND WORK SUPPORT
<b>ENGINE</b> Petrol Engine	– 2013	✓		✓	✓	✓ (Note 13)
<b>ENGINE</b> Diesel Engine	– 2013	✓	✓	✓	✓	✓ (Note 9)
<b>ENGINE</b> TSURU in Mexico	– 2013	✓		✓	✓	✓ (Note 13)
<b>A/T</b> Automatic Transmission	– 2013	✓		✓	✓	
<b>NCVT</b> Nissan Continuous Variable Transmission	– 2013	✓		✓	✓	
<b>ABS</b> Anti-Brake System	– 2013	✓	✓	✓	✓	✓ (Note 2)
<b>SRS</b> Air Bag	– 2013			✓	✓	
<b>TCS</b> Traction Control System	– 2013			✓	✓	
<b>4WD</b> 4-Wheel Drive	– 2013	✓		✓	✓	
<b>D/SUS</b> Dumping Suspension	– 2013			✓	✓	
<b>NATS</b> Nissan Anti-Theft System	– 2013			✓	✓	✓ Initialization Coding
<b>IVMS</b> In Vehicle Multiple System	– 2013			✓	✓	
<b>BCM</b> Body Control Module	– 2013			✓	✓	
<b>SMART ENTRANCE</b>	– 2013			✓	✓	✓
<b>HEAD LAMP LEVELIZER</b>	– 2013			✓	✓	

# Specification

SYSTEM	YEAR	DATA STREAM	CAN COMMUNICTION CHECK	READ CODE	CLEAR CODE	ACTIVATION AND WORK SUPPORT
<b>ADP</b> Automatic Drive Positioner	– 2013			✓	✓	
<b>EPS</b> Electronic Power Steering	– 2013	✓		✓	✓	
<b>ASCD</b> Automatic Speed Control Device	– 2013			✓	✓	
<b>TPMS</b> Tire Pressure Monitoring System	– 2013			✓	✓	
<b>ICC</b> Intelligent Cruise Control	– 2013			✓	✓	
<b>e-4WD</b> Electric 4-Wheel Drive	– 2013			✓	✓	
<b>VDC</b> Vehicle Dynamic Control	– 2013			✓	✓	
<b>ACTIVE SUSPENSION</b>	– 2013			✓	✓	
<b>HICAS</b> High Capacity Actively Controlled Suspension	– 2013			✓	✓	
<b>AIR LEVELIZER</b>	– 2013			✓	✓	✓ (Note 15)
<b>DIFFERENTIAL LOCK</b>	– 2013			✓	✓	
<b>REAR VIEW CAMERA</b>	– 2013			✓	✓	
<b>DISTANCE CONTROL</b>	– 2013			✓	✓	
<b>BATTERY CONTROLLER</b>	– 2013			✓	✓	
<b>ACTIVE ENGINE MOUNT</b>	– 2013			✓	✓	
<b>CHANGER COMMUNICATION</b>	– 2013			✓	✓	
<b>TORQUE CONTROL</b>	– 2013			✓	✓	
<b>TK ECU TYPE LKA</b> Lane Keeping Assist	– 2013			✓	✓	
<b>TK ECU TYPE</b> Lane Keeping Assist	– 2013			✓	✓	
<b>MOTOR ASSIST</b>	– 2013			✓	✓	
<b>MTR CONTROL</b>	– 2013			✓	✓	

# Specification

SYSTEM	YEAR	DATA STREAM	CAN COMMUNICTION CHECK	READ CODE	CLEAR CODE	ACTIVATION AND WORK SUPPORT
MTR Control (B)	– 2013			✓	✓	
MTR Control (B)-SUB	– 2013			✓	✓	
MTR Control (C)	– 2013			✓	✓	
MTR SUB	– 2013			✓	✓	
<b>ODS</b> Occupant Detection System	– 2013					Zero Point Reset

## MODELS EQUIPPED WITH OBD-II CONNECTOR (ONLY CAN SYSTEMS) (NOTE 3)

SYSTEM	YEAR	DATA STREAM	CAN COMMUNICTION CHECK	READ CODE	CLEAR CODE	ACTIVATION AND WORK SUPPORT
<b>ENGINE</b> Petrol Engine	– 2013	✓		✓	✓	✓ (Note 6,7)
<b>ENGINE</b> Diesel Engine	– 2013	✓		✓	✓	✓ (Note 15)
<b>AT / CVT</b> Automatic Transmission	– 2013	✓		✓	✓	✓ (Note 10)
<b>AWD / 4WD</b> All Wheel Drive / 4-Wheel Drive	– 2013			✓	✓	
<b>e-4WD</b> Electric 4-Wheel Drive	– 2013			✓	✓	
<b>ABS</b> Anti-Brake System	– 2013	✓		✓	✓	✓ (Note 11)
<b>SRS</b> Airbag	– 2013			✓	✓	
<b>ICC</b> Intelligent Cruise Control	– 2013			✓	✓	
<b>IKEY</b> Intelligent Key	– 2013	✓	✓	✓	✓	✓ (Note 8)
<b>EPS</b> Electronic Power Steering	– 2013	✓	✓	✓	✓	
<b>ADP</b> Auto Drive Positioner	– 2013			✓	✓	
<b>IPDM E/R</b> Intelligent Power Distribution Module in the Engine Room	– 2013	✓		✓	✓	
<b>TPMS</b> Tire Pressure Monitor	– 2013	✓		✓	✓	✓ (Note 5)
<b>Meter</b> Instrument Cluster	– 2013			✓	✓	
<b>Meter &amp; A/C Amplifier</b> Instrument Cluster & A/C Amplifier	– 2013			✓	✓	
<b>BCM</b> Body Control Module	– 2013	✓	✓	✓	✓	✓ (Note 4)
<b>EHS/PKB</b> Easy Hill Start/Parking Brake	– 2013			✓	✓	✓ (Note 17)

# Specification

<b>4WAS FRONT</b> 4-Wheel Active Steering	– 2013			✓	✓	
<b>4WAS MAIN</b> Four Wheel Active Steering	– 2013			✓	✓	
<b>RAS / HICAS</b> High Capacity Controlled Suspension						
<b>ASD</b> Auto Slide Door	– 2013			✓	✓	
<b>AUTO SLIDE DOOR RIGHT</b>	– 2013			✓	✓	
<b>PRECRASH SEATBELT</b>	– 2013			✓	✓	
<b>ADAPTIVE LIGHT</b>	– 2013			✓	✓	
<b>MULTIMEDIA A/V</b>	– 2013			✓	✓	
<b>DIU</b> Data Interface Unit	– 2013			✓	✓	
<b>LDW</b> Lane Departure Warning	– 2013			✓	✓	
<b>HVAC</b> Heating, Ventilation, Air Conditioning	– 2013	✓		✓	✓	
<b>NATS5</b> Nissan Anti-Theft System	– 2013			✓	✓	NATS C/U Initialization
<b>POWER BACK DOOR</b>	– 2013			✓	✓	
<b>E-SUS</b> Electronic Suspension	– 2013			✓	✓	
<b>POPUP ENGINE HOOD / BORNET</b>	– 2013			✓	✓	

Only for EV/HEV MODELS EQUIPPED WITH OBD-II CONNECTOR

SYSTEM	YEAR	DATA STREAM	CAN COMMUNICTION CHECK	READ CODE	CLEAR CODE	ACTIVATION AND WORK SUPPORT
<b>ABS / ECB HYBRID</b>	– 2013	✓		✓	✓	
<b>BRAKE</b>	– 2013			✓	✓	Stroke Sensor 0 Point Learning
<b>EV/HEV</b> Electric Vehicle / Hybrid Electric Vehicle Control Module	– 2013			✓	✓	✓ (Note 18)
<b>HV BATTERY</b>	– 2013			✓	✓	✓ (Note 19)
<b>MOTOR CONTROL</b>	– 2013			✓	✓	✓ (Note 20)
<b>HV BATTERY</b>	– 2013			✓	✓	✓ (Note 21)
<b>SHIFT</b>	– 2013			✓	✓	✓ (Note 22)
<b>VSP - VEHICLE SOULD FOR PEDESTRIANS</b>	– 2013			✓	✓	✓ (Note 23)

## MODEL GT-R R35

SYSTEM	YEAR	DATA STREAM	CAN COMMUNICTION CHECK	READ CODE	CLEAR CODE	ACTIVATION AND WORK SUPPORT
<b>ENGINE</b> Petrol Engine	– 2013	✓		✓	✓	✓ (note 16)
<b>A/T</b> Automatic Transmission	– 2013	✓		✓	✓	✓ (note 12)
<b>AWD / 4WD</b> A-Wheel Drive / 4-Wheel Drive	– 2013			✓	✓	
<b>e-4WD</b> Electric 4-Wheel Drive	– 2013			✓	✓	
<b>ABS</b> Anti-Brake System	– 2013	✓		✓	✓	✓ (note 11)
<b>SRS</b> Airbag	– 2013			✓	✓	
<b>ICC</b> Intelligent Cruise Control	– 2013			✓	✓	
<b>IKEY</b> Intelligent Key	– 2013	✓		✓	✓	
<b>EPS</b> Electronic Power Steering	– 2013	✓		✓	✓	
<b>IPDM E/R</b> Intelligent Power Distribution Module in the Engine Room	– 2013	✓		✓	✓	
<b>TPMS</b> Tire Pressure Monitor	– 2013	✓		✓	✓	✓ (note 5)
<b>Meter &amp; A/C Amplifier</b> Instrument Cluster & A/C Amplifier	– 2013			✓	✓	
<b>BCM</b> Body Control Module	– 2013			✓	✓	✓ (Note 4)
<b>EHS/PKB</b> Easy Hill Start/Parking Brake	– 2013			✓	✓	✓ (Note 17)
<b>PRECRASH SEATBELT</b>	– 2013			✓	✓	
<b>ADAPTIVE LIGHT</b>	– 2013			✓	✓	
<b>MULTIMEDIA A/V</b>	– 2013			✓	✓	
<b>DIU</b> Data Interface Unit	– 2013			✓	✓	
<b>HVAC</b>	– 2013	✓		✓	✓	

# Specification

**AUTOLAND®**  
SCIENTECH

Heating, Ventilation, Air Conditioning						
<b>NATS5</b> Nissan Anti-Theft System	– 2013			✓	✓	NATS C/U Initialization
<b>E-SUS</b> Electronic Suspension	– 2013			✓	✓	
<b>HEAD LAMP LEVELIZER</b>	– 2013			✓	✓	
<b>POPUP ENGINE HOOD / BORNET</b>	– 2013			✓	✓	

## BCM ITEMS

SYSTEM	DATA STREAM	READ CODE	CLEAR CODE	ACTIVATION AND WORK SUPPORT
BCM	IMMU	✓		✓
	INTELLIGENT KEY	✓		✓
	MULTI REMOTE ENT	✓		✓
	THEFT ALM	✓		✓
	AIR CONDITIONER	✓		✓
	DOOR LOCK	✓		✓
	TRUNK	✓		✓
	INT LAMP	✓		✓
	HEAD LAMP	✓		✓
	AIR PRESSURE MONITOR	✓		✓ (Note 5)
	BATTERY SAVER	✓		✓
	BUZZER	✓		✓
	COMB SW	✓		✓
	FLASHER	✓		✓
	FUEL LID	✓		✓
	PANIC ALARM	✓		✓
	REAR DEFOGGER	✓		✓
	RETAINED PWR	✓		✓
	SIGNAL BUFFER	✓		✓
	WIPER	✓		✓
SEC-E C/U OR BCM C/U	CAN communication check	✓	✓	
KEYLESS ENTRY	✓			✓
KEY REMINDER	✓			✓
CHILD LOCK	✓			✓
H/L EASH	✓			✓
DIRECTION INDICATORS	✓			✓

Note:

1. Some of early models, Automatic Transmission, ABS and Air bag systems have no digital protocol communication capability. It might be used jumping wire to energize the impulse codes or flash codes on Instrument cluster.
2. ABS WORK SUPPORT, include:
  - (1) Steering angle adjust.
  - (2) Deceleration G sensor calibration.
  - (3) Side G sensor calibration.
  - (4) Pressure sensor calibration.ABS Activation: (The software will detect the functions are supported by the ECU or not)
  - (1) Fr Rh Solenoid
  - (2) Fr Lh Solenoid
  - (3) Rr Rh Solenoid
  - (4) Rr Lh Solenoid
  - (5) Rear Solenoid
  - (6) Abs Motor
  - (7) Front Solenoid
  - (8) Rear Solenoid
  - (9) Fr Rh Abs Solenoid(Act)
  - (10) Fr Lh Abs Solenoid(Act)
  - (11) Rr Rh Abs Solenoid(Act)
  - (12) Rr Lh Abs Solenoid(Act)
  - (13) Front Abs Solenoid(Act)
  - (14) Rear Abs Solenoid(Act)
  - (15) Slip Lamp
  - (16) Abs Warning Lamp
  - (17) Vdc Warning Lamp
  - (18) Tcs Fail Signal
  - (19) Ascd Signal
  - (20) Booster Drive
  - (21) Stop Lamp On Relay
3. For iSCAN-II users: to communicate with the CAN protocol models (after 05'), please select OBDII-IM5 instead of ASIAN-IM1. Please connect with vehicles using OBDII-IM5 first, then try ASIAN-IM1 if fail to connect. A car may equip with CAN system and non-CAN system together. **For more connection information, please refer to "Quick Manual For The Diagnostic Cable Connection". A LOTS OF NEW FUNCTIONS MAY NOT WORK ON iSCAN-II because of the physical hardware limitation.**
4. **BCM** Functions supported : BCM NUMBER READER, STEERING LOCK RELEASE.
5. **TPMS**, Tire Pressure Sensor: Read ID, Register ID
6. **PETROL ENGINE** system, Work Support:
  - (1) Idle Air Flow Learning
  - (2) Ignition Timming Adjustment
  - (3) Idle Speed Adjustment
  - (4) Self-Learning Control

- (5) TPS learned value reset
- (6) TPS close position learning
- (7) (TBD) MT Learning
- (8) VVEL position sensor adjustment
- (9) VIN REGISTRATION
- 7. **PETROL ENGINE** system, Activation: (The software will detect the functions are supported by the ECU or not)
  - (1) Alternator Duty
  - (2) Cooling Fan
  - (3) Engine Coolant Temperature
  - (4) Engine Mounting
  - (5) Fan Duty Control
  - (6) Fuel Injecting
  - (7) Fuel Pump Relay
  - (8) Fuel Tank Temperature sensor
  - (9) Ignition Timming
  - (10) Power Balance
  - (11) Purge Volume Control Valve
  - (12) Tumble Control Valve
  - (13) Vent Control Valve
  - (14) VIAS solenoid Valve
  - (15) VIAS solenoid Valve B2.
- 8. **I-KEY** functions:
  - (1) Register I-KEY number
  - (2) Check I-KEY remote position.
- 9. **DIESEL ENGINE**, Work Support:
  - (1) Injector Adjustment Value Registration
  - (2) DPF Service Regeneration
  - (3) DPF Data Clear
  - (4) Configuration Clear
  - (4) Injector Adjustment Value Clear
  - (5) A/F Sensor Learn Clear
  - (6) EGR Valve Learn Clear
  - (7) (TBD)ETC Positioner Clear
  - (8) Pump Learnt Clear
- 10. **AT / CVT**, Work Support: Confirm CFTF Deteriora
- 11. **ABS**, Work Support:
  - (1) Deceleration G Sensor Calibration
  - (2) Valve Calibration
  - (3) Steering Angle Sensor Adjustment
  - (4) Side G sensor calibration
  - (5) Pressure sensor calibration
  - (6) Yaw rate/Side/Deceleration G sensor calibration

12. A/T for GT-R R35, Work Support: Clutch Gear Learning

13. **ENGINE SYSTEM, WORK SUPPORT:**

- (1) Check Fuel Lines
- (2) Closed TH/SW Adjust (IACV-AAC/V, 0 Step)
- (3) Closed TH/SW Adjust (IACV-AAC/V, 0%)
- (4) Closed TH/SW Adjust (IACV-IDLE/UP, Off)
- (5) Closed TH/SW Adjust
- (6) CO Adjustment
- (7) Ethanol M/R Adjust
- (8) EVAP System Close
- (9) Exhaust V/T Control Learn
- (10) Fuel Pressure Release
- (11) IACV-AAC/V Adjust
- (12) Idle Air Volume Learn
- (13) Idle Air Volume Learn Adjust
- (14) Idle RPM Adj
- (15) Idle RPM Adjust
- (16) Ignition Timing Adjust
- (17) Self-Learning Control
- (18) Self-Learning Control
- (19) Set Idle Speed
- (20) Target Idle RPM Adjust
- (21) Target Ign Timing Adjust
- (22) TP Sw/TP Sensor Idle Position Adjust
- (23) TPS Idle Position
- (24) V/T Control Learn
- (25) VIN Registration

**ENGINE SYSTEM, ACTIVATION:**

- (1) Air Conditioner Relay
- (2) Clear Self-Learning Control Value
- (3) Coolant temperature
- (4) Cooling Fan
- (5) EGR Volume Control
- (6) EGRC Solenoid Valve
- (7) Engine Coolant Temperature
- (8) Engine Mounting
- (9) FPCM
- (10) Fuel Injection
- (11) Fuel Pump Relay
- (12) Fuel Temperature Sensor
- (13) IAC/AAC valve
- (14) IACV-AAC Opening

- (15) Ignition Timing
- (16) Power Balance
- (17) Pressure Regulator
- (18) Purge Vol Control Valve/EAVP valve
- (19) Swirl Control Solenoid Valve
- (20) Target Fan RPM
- (21) Valve Timing Solenoid
- (22) Valve Timing Solenoid
- (23) Vent Control Valve
- (24) VIAS Solenoid Valve.

## 14. AIR LEVELIZER ADPATATION

- (1) Standard Height Level(Initialize The Vehicle Height)
- (2) Adjust Height Initialization Value (Set The Vehicle Height Initialization Value)
- (3) Clear Height Initialization Value (Clear The Vehicle Height Initialization Value)

## 15. DIESEL ENGINE(CAN) ADAPTATION

- (1) EGR Adaptives
- (2) Programmed Values
- (3) Reset Injector Adaptive
- (4) Reset Pump Force-Feeding
- (5) After Dpf/Fap Regeneration
- (6) Config Clear
- (7) DPF Data Clear
- (8) DPF Data (PM Amount) Clear
- (9) DPF/FAP Replacement
- (10) EGR Adaptives
- (11) EGR Valve Learn Clear
- (12) EGR Volume Control Valve Closed Position Learning Value Clear
- (13) Fuel Injecion Quantity Learning
- (14) Injector Adjustment Value Clear
- (15) Injector Code
- (16) Learning
- (17) P062F Exclusive Function
- (18) Pressure Regulation Adaptives

- (19) Programmed Values
- (20) Programming Reinitialisation
- (21) Service Regeneration
- (22) ZFC Value Reset

## 16. GT-R35 Engine Adaptation

- (1) Idle Air Volume Learn

## 17. EHS/EPB Adaptation

- (1) Actuator 0 Point Learning

## 18. EV/HEV

### ADAPTATION

- (1) Clutch 1 Position Learning

### ACTIVATION

- (1) Water Pump
- (2) Water Pump 1
- (3) Water Pump 2
- (4) Cooling Fan

## 19. HV Battery Adaptation

- (1) LI-ION Battery Capacity Balancing

## 20. MOTOR CONTROL ADAPTATION

- (1) Clear Output Limit Reason

## 21. SHIFT ADAPTATION

- (1) Parking Position Learning Value Clear

## 22. VSP ACTIVATION

- (1)VSP Speaker
- (2)Startup Sound Speaker
- (3)VSP OFF Indicator

The information contained herein is the exclusive property of Autoland Scientech® and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of Autoland Scientech®. Autoland Scientech® reserve the right to make any change without notice. The trademarks mentioned belong to the owners.